

Hose Nozzle Wrench Assembly Instructions

Assemble the AMERICAN Flow Control Hose Nozzle Wrench by inserting the head of the wrench into the handle. Ensure that the spring pin on the head is securely positioned into the hole located on the handle of the wrench.



Spring Pin



The AMERICAN Flow Control Hose Nozzle Wrench is configured with two sides. One side of the wrench is for use with a standard hose nozzle retainer, while the other side is oversized to account for additional layers of hydrant paint. The side that is oversized is marked "OS". Use the side for a standard nozzle retainer if possible to ensure a tight connection between the wrench and the retainer.

