

# ALPHA™ Restraint Joint Installation Instructions

Read installation instructions first before installing. Check parts to ensure that no damage has occurred during transit and that no parts are missing.

ALPHA restraint joints will accommodate the following pipe types and sizes:

## ALPHA

- Ductile iron per AWWA C151
- PVC per ASTM D1785 (Schedule 40 and 80)
- PVC per ASTM D2241 (SDR 21)
- PVC per AWWA C900
- HDPE per AWWA C906 (SDR 9, 11, 13.5, and 17)

## ALPHA XL


- Gray iron (Class A, B, C, and D)

Nominal Size (in)	ALPHA OD Range (in)	ALPHA XL OD Range (in)
4	4.50 - 4.90	4.80 - 5.10
6	6.60 - 7.00	6.90 - 7.10
8	8.60 - 9.10	9.05 - 9.40
10	10.75 - 11.20	11.10 - 11.45
12	12.75 - 13.30	13.20 - 13.60

1. Compare diameter of pipe with those listed above to ensure that the correct size joint has been selected.
2. Remove any scale or debris that could interfere with the grippers' engagement with the pipe. Clean the pipe surface wherever the gasket will come in contact with the pipe, and check to see that the pipe surface is smooth (no depressions, projections, gouges, etc.) where the gaskets seal against the pipe. Also verify that the pipe is round within the OD limits described in step 1 and that the pipe cut is square.
3. Mark the OD of the pipe as a means of verifying full insertion in the joint. The pipe should be marked at the following locations as measured from the end of the pipe.

Nominal Size (in)	Distance From the End of Pipe (inches)	
	ALPHA	ALPHA XL
4	3.50	4.25
6	3.75	4.00
8	5.00	5.50
10	5.13	5.63
12	5.38	6.00

4. Lubricate the gasket and pipe surface with a suitable gasket lubricant.
5. With the nut unthreaded to the end of the bolt and the end ring rotated as far counterclockwise as possible, insert pipe into the ALPHA socket until it contacts the pipe stop. The mark applied to the pipe OD in step 3 should be aligned with the edge of the pipe socket.

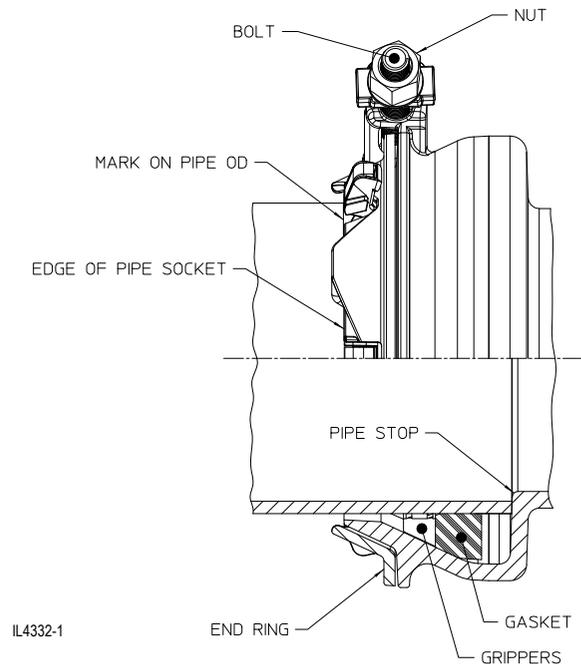

**AMERICAN**  
FLOW CONTROL

**THE RIGHT WAY**

AMERICAN Flow Control  
P.O. Box 2727  
Birmingham, Al. 35202-2727  
Phone: 1-800-326-8051  
Fax: 1-800-610-3569  
E-mail: afcsales@american-usa.com


Waterous Company  
125 Hardman Avenue South  
South St. Paul, Mn. 55075-1191  
Phone: 1-888-266-3686  
Fax: 1-800-601-2809  
E-mail: afcsales@american-usa.com

ALPHA™ is a licensed trademark of Romac Industries, Inc. (U.S. Patent 8,894,100)

[WWW.AMERICAN-USA.COM](http://WWW.AMERICAN-USA.COM)

6. Set the desired pipe deflection angle (4° maximum). ALPHA XL installations on pipe at the top of the OD range may have limited deflection (2° maximum).

**Note: Do not deflect pipe joint after installation.**

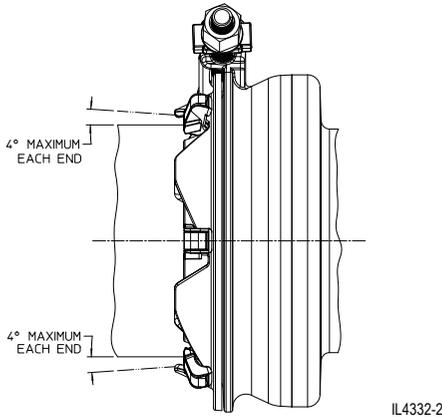

7. Tighten nut until the gasket contacts the pipe and the pipe is snugly held in place. This should happen after applying approximately 10-15 ft-lbs of torque.

8. Tighten the nut to the torque value shown in the table below and confirm that the grippers are contacting the pipe.

Nominal Size (in)	Torque (ft-lbs)
4	30
6	30
8	45
10	45
12	45

**Note: Do not overtorque or retighten. If a good seal is not achieved after tightening nut to the torque value shown in the table above, check condition of pipe (Step 2), verify maximum pipe deflection is not exceeded (Step 6), and ensure pipe is fully inserted into the socket and contacting the pipe stop.**

- 9. Confirm proper installation by pressurizing the line and checking for leaks.
- 10. Backfill and compact carefully around the pipe and joint.

## PRECAUTIONS

1. Make sure no foreign material is trapped between the gasket and pipe, between the grippers, or in the end ring mechanism.
2. Carefully inspect gasket for damage and ensure that the cut end of the pipe has been sufficiently deburred to prevent damage to the gasket during installation.
3. Keep bolt threads free of debris to allow proper tightening.
4. To ensure proper nut tightening, use of a torque wrench with a 1-1/16-inch deep-well socket is recommended. Do not overtorque. Do not use an impact wrench.
5. Do not strike or pry on the joint with hammers, shovels, or other equipment.
6. Operating pressure shall not exceed whichever is lower; the rated working pressure of the pipe, or that of the adjoining valve or hydrant.
7. When used with HDPE pipe, application shall be limited to service with water temperature between 32° F and 85° F.
8. For cold weather conditions (below 40° F), performance can be improved by warming the joint and gasket.
9. Per ANSI/AWWA C605, which governs the installation of PVC pipe, the factory bevel on PVC pipe may need to be removed or shortened to ensure gasket contact when used with fittings, valves, hydrant and other appurtenances.
10. The use of ALPHA restraint joints on valves and fire hydrants shall be limited to buried (non-exposed) applications.
11. ALPHA is not intended for use on the plain end of a fitting, or other similarly hard material.



**AMERICAN**  
FLOW CONTROL

**THE RIGHT WAY**

AMERICAN Flow Control  
P.O. Box 2727  
Birmingham, Al. 35202-2727  
Phone: 1-800-326-8051  
Fax: 1-800-610-3569  
E-mail: afcsales@american-usa.com

Waterous Company  
125 Hardman Avenue South  
South St. Paul, Mn. 55075-1191  
Phone: 1-888-266-3686  
Fax: 1-800-601-2809  
E-mail: afcsales@american-usa.com

[WWW.AMERICAN-USA.COM](http://WWW.AMERICAN-USA.COM)